

# Oil & Filter Change

## OIL CHANGE:



1) Carefully remove the machine back cover using the supplied 2.5mm hex wrench.



2) Carefully remove the lower oil fill plug using the supplied 5mm hex wrench.

**CAUTION:** Have a catch basin under the machine for the oil to drain into.

3) Refer to STEP2 for ADDING OIL.

## OIL CONDITIONER:

1) Follow instruction for OIL CHANGE (except use conditioner).

2) Use machine as normal for minimum 2 hours maximum 6 hours.

3) Follow instruction for OIL CHANGE and ADDING OIL.

## FILTER CHANGE:



1) Carefully remove the machine side cover using the supplied 2.5mm hex wrench.



2) Using pliers carefully unscrew the cover protecting the exhaust filter.



3) Using a flat blade screw driver carefully remove the exhaust filter.



4) Replace exhaust filter and reassemble all covers removed.